

Piezoresistive Accelerometer

ASC 62C1



- ▶ Uniaxial
- ▶ Wheatstone Bridge
- ▶ mV Output
- ▶ Aluminium Housing
- ▶ Made in Germany

Features

- ▶ Range: 500g, 1000g and 2000g
- ▶ Very Small Size
- ▶ Light Weight
- ▶ DC Response
- ▶ ± 5000 g Shock Resistance
- ▶ Gas Damped
- ▶ 3-10Vdc Excitation

Options

- ▶ Customised Cable Length
- ▶ Customised Connector
- ▶ TEDS Module
- ▶ Equipment Exchange (EQX)

Applications

- ▶ Automotive Crash Testing
- ▶ Shock Testing

Piezoresistive MEMS Technology


The accelerometers are based on an advanced piezoresistive MEMS technology and can be used in a low frequency response up from 0Hz. The piezoresistive sensor element is made of monolithic resistors. These resistors are attached to carrier-elements and are electrically connected in a Wheatstone bridge. The electrical signal changes proportional to the vibration.

Description

The model ASC 62C1 is an uniaxial accelerometer based on piezoresistive technology and factory calibrated. The ASC 62C1 is a very small and compact accelerometer which meets the specification SAE J211. Its housing is a cube form and hard anodised aluminium. Due to its low mass this model is ideal for testing light weight structures.

The sensing element has integrated overload stops and therefore the silicon chip is highly shock resistant. The ASC 62C1 has an excellent non-linearity over a wide frequency response. Electrically it is configured as a Wheatstone Bridge.

The ASC 62C1 can be obtained with all common sensor ID modules. A very high flexible and rugged cable provides a simple mounting. The ASC 62C1 is equipped as standard with 6 meter of this cable.

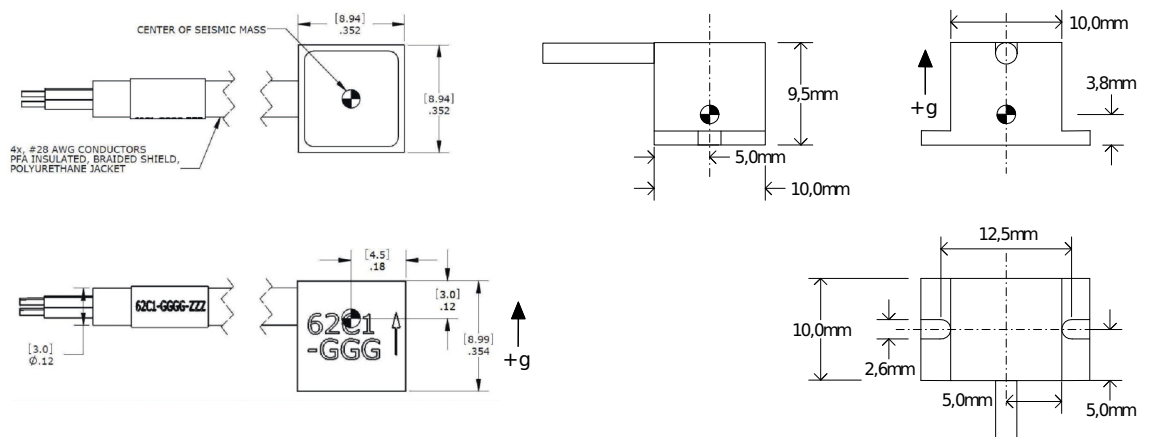

Typical Specifications

MODEL NUMBER ASC 62C1

Type: MEMS Piezoresistive Accelerometer

DYNAMIC

		Range (\pm g)		
		500	1000	2000
Model		62C1	62C1	62C1
Sensitivity ¹	mV/g	0.4	0.15	0.13
Frequency response: \pm 5%	Hz		2500	
Resonance frequency	kHz	15	15	26
Amplitude non-linearity	% FSO		\pm 1	
Damping ratio			0.7	
Transverse sensitivity	%		<3	
Shock limit	\pm g		5000	
Recovery time	s		0.5	

¹Output is ratiometric to excitation voltage

ELECTRICAL

Excitation voltage	V DC		3 to 10
Zero acceleration output	mV		\pm 25
Insulation resistance	M Ω		>100
Isolation			Case isolated

ENVIRONMENTAL

Temperature coefficient of bias (Thermal zero shift)	g/ $^{\circ}$ C	\pm 0.25	\pm 0.5	\pm 1
Temperature coefficient of sensitivity (Thermal sensitivity shift)	%/ $^{\circ}$ C		-0.2	
Operating temperature range	$^{\circ}$ C		-20 to +80	
Storage temperature range	$^{\circ}$ C		-25 to +100	
Humidity / Sealing			Epoxy sealed	

PHYSICAL

Sensing element		Piezoresistive MEMS		
Case material		Anodized Aluminium		
Mounting		3 mm screws / Adhesive		
Weight (without cable)	gram	3		
Cable		12 gram/meter; AWG 30, Polyurethane (PUR); Diameter: 3mm		

FACTORY CALIBRATION (SUPPLIED WITH THE SENSOR)

Shaker Calibration (Sinusoidal)			
Range	500g	1000g	2000g
Sensitivity	at 80Hz and 20g		
Frequency Response	40Hz to 2500Hz		
Pendulum (Shock) Calibration			
Range	500g	1000g	2000g
Sensitivity	5 shocks at 100g		

CALIBRATION DIN ISO 17025 (ORDER SEPARATELY)

Shaker Calibration (Sinusoidal)			
Range	500g	1000g	2000g
Sensitivity	at 80Hz and 20g		
Frequency Response	25Hz to 3150Hz		
Pendulum (Shock) Calibration			
Range	500g	1000g	2000g
Linearity	One shock each at 50g, 100g, 150g, 200g and 250g		

Cable Code/Pin Configuration

Red	Supply +
Black	Supply -
Green	Signal +
White	Signal -

ORDERING INFORMATION

ASC	62C1	500	6	A
	Model number	Range (Ex. 500 is 500g)	Cable length (meters)	Connector & Pinout
				A: no connector

ASC GmbH · Advanced Sensors Calibration

Ledererstraße 10 · 85276 Pfaffenhofen · Germany · Tel. +49 (0) 8441 786 547 -0 · office@asc-sensors.de

All data, information, statements, photographs and graphic illustrations made in this data sheet are without any obligation and raise no liabilities to or form part of any sales contracts of ASC GmbH or any affiliates for components referred to herein.
© ASC GmbH 2011. All rights reserved. No part of this copyrighted work may be reproduced, modified or distributed in any form or by any means, or stored in any database or retrieval system, without the prior written permission of ASC GmbH or its affiliates. Any such unauthorized use for any purpose is a violation of the relevant copyright laws. Revision 6th June 2018

